



Always Read All Product Literature **BEFORE** installing product. https://www.warn.com/manuals/index.jsp

## **WARNING**

- **Always** position fairlead with warning readily visible on top.
- **Always** use class 8.8 metric (grade 5) or better hardware.
- **Never** weld mounting bolts.
- **Never** use bolts that are too long.
- **Always** confirm required bolt length to ensure proper thread engagement.
- **Always** complete the winch installation and hook attachment before installing the wiring.

## Mounting



 



Plate Thickness	Bolt Length
1/4" (7 mm)	1.25" (32 mm)
3/8" (10 mm)	1.5" (40 mm)
1/2" (13 mm)	1.5" (40 mm)

 


ltem	Qty	Description	ltem	Qty	Description
Α	4	3/8 - 16	Α	4	3/8 - 16
В	4	3/8" (9.5 mm)	В	4	3/8" (9.5 mm)
С	4	3/8 - 16 x 1 1/4"	С	2	3/8 - 16 x 1 1/4"
			D	2	3/8 - 16 x 1 1/2"

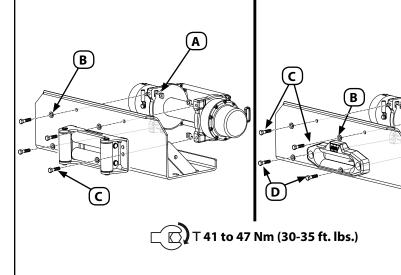

ltem	Qty	Description	ltem	Qty	Description
Α	4	3/8 - 16	Α	1	Control Pack
В	4	3/8" (9.5mm)	В	1	Bracket
С	4	3/8 - 16 x 1 1/4"	С	2	M6 x 10
			D	1	7/16 - 14 X 1″

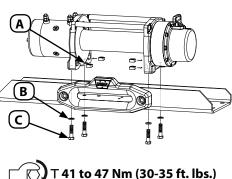

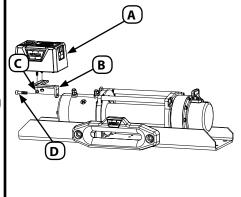

## Wiring

## **WARNING**



Always remove jewelry and wear eye protection when making battery connections.

- Never route electrical cables across sharp edges.
- **Never** route electrical cables near parts that get hot.
- **Never** route electrical cables over battery terminals.
- **Never** route electrical cables through or near moving parts.
- **Always** insulate and protect all exposed wiring and electrical terminals.
- **Always** place the supplied terminal boots on wires and terminals.

